





# OPTIONS FOR SUBFLOOR REQUIREMENTS

Tiling doesn't have to be intimidating: taking time to carefully prepare beforehand will greatly increase the success of your installation! And one of the most important considerations for tiling a floor is ensuring your subfloor is strong and ready to tile.


## OPTION 1: TOTAL HEIGHT = 1 1/4"

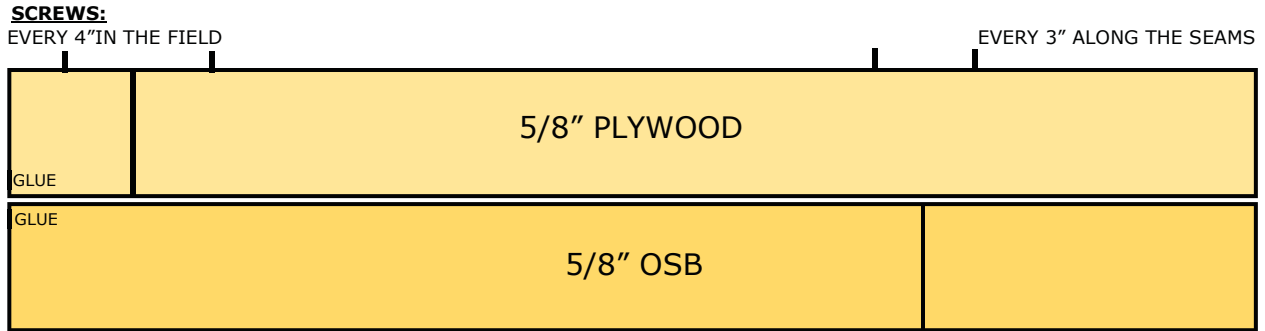

## OPTION 2: TOTAL HEIGHT = 1 1/4"

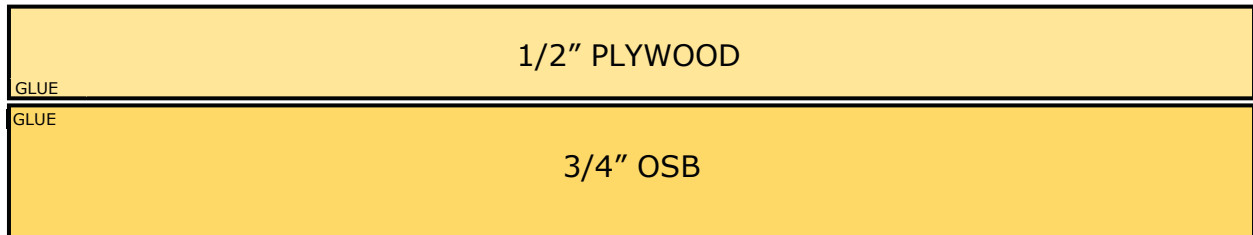

## OPTION 3: TOTAL HEIGHT = 3/4"

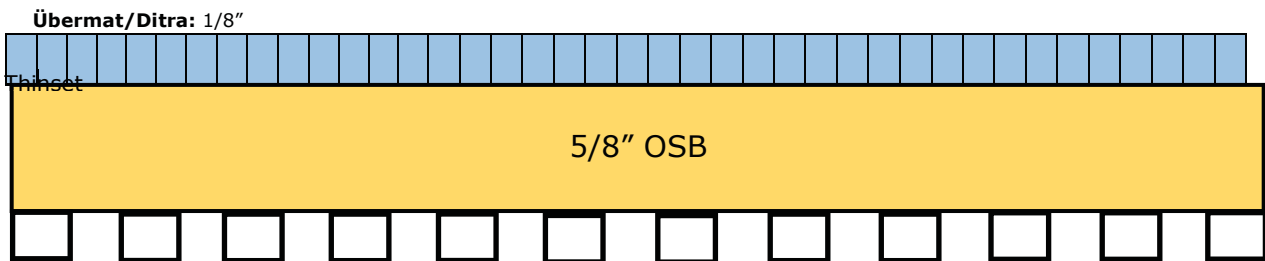

\*--16"--\*

**\*JOISTS MAX 16" ON CENTER\***



- Use standard plywood. (Not good one side)
- Keep Plywood indoors 7-10 days prior to installation.
- When sheeting leave a 1/4" gap between sheets and fill with thinset.
- Screws are only to be the combine thickness of your subfloor and your base to which you are fastening to. You do not want to screw into joists.
- When sheeting an area that will be exposed to moisture it is better to use Übermat.

THIS GUIDE IS FOR REFERENCE ONLY. ALWAYS REFER TO LOCAL BUILDING CODE FOR THOROUGH INSTALLATION REQUIREMENTS. ALWAYS CONSULT AND FOLLOW MANUFACTURERS SPECIFIC INSTALLATION AND SAFETY INSTRUCTIONS BEFORE INSTALLING PRODUCTS.